



657 Series Indicator Holders

Base has three precision ground, magnetic contact surfaces. Grips horizontally, vertically or upside down. V-step holds base to round surfaces. Extra #1/4-20 tapped hole in one side of base (not shown) for mounting post.

Available with or without Starrett AGD Dial Indicators: inch reading 25-131J (graduation .0005", dial reading 0-25-0, range .125") or millimeter reading 25-181J (graduation 0.01mm, dial reading 0-50-0, range 2.5mm). Other indicators can be furnished on request.


A. 657P Magnetic Base – 1-15/16" x 1-5/8" x 1-7/8" (50 x 40 x 48mm) deep. Push button on/off switch for one-hand operation.

B. 657G Upright Base Post – 3/8" (9.5mm) diameter x 7-7/16" (190mm) length overall.

C. 657H Swivel Post Snug – Allows universal indicator adjustment – up-and-down, any vertical angle, for a complete 360°. Two 3/8" (9.5mm) holes.

D. PT06784-A Gage Holding Rod – 3/8" x 9-1/2" (9.5 x 240mm) with clamping mechanism for gripping the indicator lug back (see photo below).

E., F. 57S and 58S Universal Snugs – Adapt various scribers and indicator shanks to rods and posts.

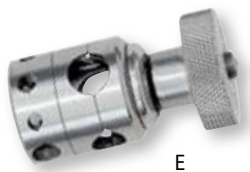

Base Holder Assembly and Individual Components

Photo Key	Description	Catalog No.	EDP
	Magnetic Base, Upright Post Assembly Including Post, Swivel Post Snug and Gage Holding Rod	657D	52749
A	Magnetic Base Only	657P	52757
B	Upright Base Post Only	657G	52753
C	Swivel Post Snug Only	657H	52785
D	Gage Holding Rod with Clamp Mechanism	PT06784-A	52755
E	Universal Snug with 5/16" and 3/8" Hole Dia.	57S	50296
F	Universal Snug with 1/4", 5/16" and 3/8" Hole Dia.	58S	56613

Sets Including Magnetic Base, Upright Post Assembly and AGD Dial Indicators

Description	w/Finished Wood Case		Without Case	
	Catalog No.	EDP	Catalog No.	EDP
Base and Upright Post Assembly with Inch Reading Indicator 25-131J	657EZ	52751	657E	52750
Base and Upright Post Assembly with Millimeter Reading Indicator 25-181J	657MEZ	56358	657ME	56357